



# User's Manual

SUN-PCC-ZH10

Pneumatic Compression Crimper

English

### Technical parameters


Air pressure: 0.5Mpa.  
Voltage: 220V  
Power: 5W  
Size: 15 \* 22 \* 30cm  
Weight: 15Kg

### Standard Accessories

Pressure indicator 1pc

### Equipment Overview

#### Front

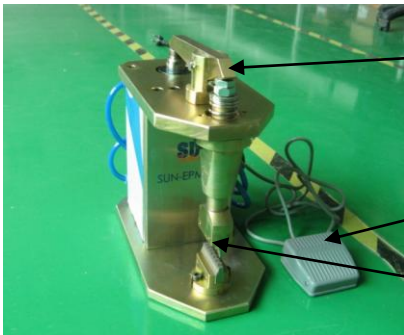

Pressure bar

Footswitch


JAW

#### Back



Outlet

## The Side

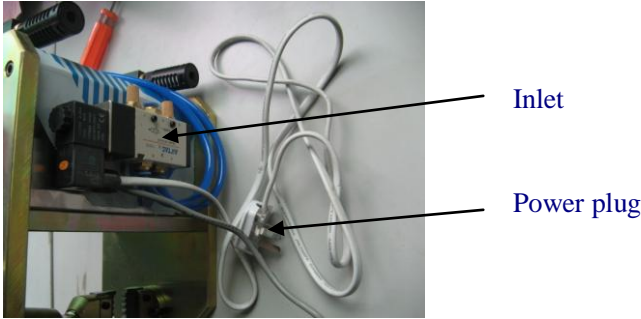

## Safety Tips


1. This equipment is strictly prohibited two people simultaneously
2. Pressure bar will be in operation during the exercise, not to handle and cable on the top
3. Equipment in official use before electricity, ventilation, and air operated for 10 times to become familiar with equipment
4. This device uses 220V voltage. Pressure control in 0.5MPa

## Operation steps

1. Power, this equipment uses 220V AC, power of 5W.
2. Ventilation: This equipment uses compressed air, pressure of not less than 0.5MPa. Pipe diameter: 8mm




3. Choice and spare parts corresponding to the jaw size

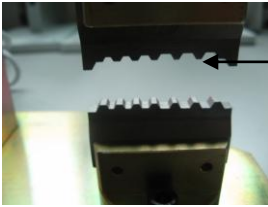


JAW, crimping Do not touch here

4. The end of the connector into the port above the corresponding teeth

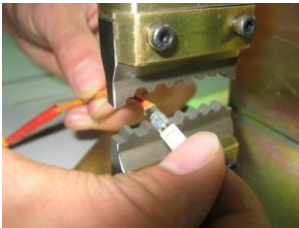

5. Hands should be placed a safe place

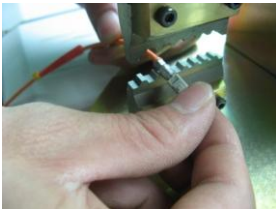

6. Press the foot switch



**SHANGHAI SUN TELECOMMUNICATION CO., LTD.**

Building No 145, Lane 666 Xianing Road

Jinshan Industrial Park, Shanghai 201506

Tele: +86-21-60138638 Fax: +86-21-60138635-401

E-mail: [ics@suntelecom.cn](mailto:ics@suntelecom.cn)

<http://www.suntelecom.cn>

